

# Corso Sectional Series

## DESIGN YOUR OWN SERIES

Contemporary style with modular flexibility, this Corso sectional provides both extreme comfort and the opportunity to change your configuration on demand. Shown in the 42-inch depth but add further dimension with the optional 38-inch opportunity.



SHOWN:  
(5) U2A1-SBC Corso Armless Chairs  
(1) U2E1-SBC Corso Sectional Chair  
Seat height: 16  
Finish: Modern Elm

## BUILD YOUR CORSO SECTIONAL IN 6 EASY STEPS

STEP 1: Select your Upholstery

STEP 2: Select your Depth

U2 Depth: 42"

U8 Depth: 38"

STEP 3: Select your Frame

01 - Ottoman

SL - Left Arm Sofa W=93"

SR - Right Arm Sofa W=93"

DL - Left Arm Davenport Corner Sofa W=107"

DR - Right Arm Davenport Corner Sofa W=107"

LL - Left Arm Loveseat W=65"

LR - Right Arm Loveseat W=65"

E1 - Sectional Chair W=42"

A1 - Armless Chair W=28"

STEP 4: Select your Seat Style

S - Single Bench Cushion

M - Multi, Three Seat Cushion

STEP 5: Select your Back Style

B - Box (loose)

K - Knife (loose)

STEP 6: Select your Base Style

W - Wood Foot


C - Concealed foot

NOTE: Additional 13" x 23" Kidney Pillows are eliminated on the #U8 (38" depth) frame styles.




SHOWN:  
 U8SL-MBW Corso Left Arm Sofa  
 U801-SXW Corso Ottoman  
 U8SR-MBW Corso Right Arm Sofa  
 Arm height: 25 / Seat height: 16  
 Finish: Modern Elm

**Corso Sectional Elements**  
 1/4" = 1' Scale

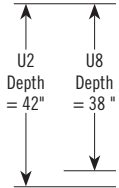


**U2A1 Corso Armless Chair**  
 Overall: W28 D42 H35 Inside: W28 D24 H21

**U8A1 Corso Armless Chair**  
 Overall: W28 D38 H35 Inside: W28 D20 H21  
 Seat height: 16

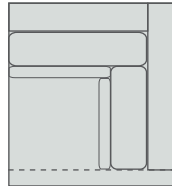



**U2E1 Corso Corner**  
 Overall: W42 D42 H35  
 Inside: W24 D24 H21

**U8E1 Corso Corner**  
 Overall: W42 D38 H35  
 Inside: W28 D20 H21

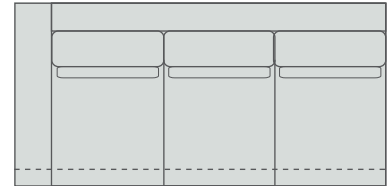


**U2SL Corso Left Arm Sofa**  
 W93 D42 H35  
 Inside: W84 D24 H21

**U8SL Corso Left Arm Sofa**  
 Overall: W93 D38 H35 Inside: W84 D20 H21

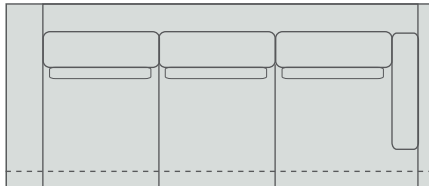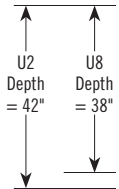


**U2DL Corso Left Arm Corner Sofa**  
 Overall: W107 D42 H35 Inside: W87 D24 H21

**U8DL Corso Left Arm Corner Sofa**  
 Overall: W107 D38 H35 Inside: W87 D20 H21

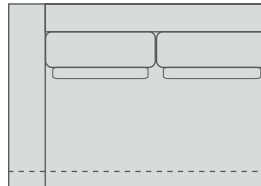



**U2LL Corso Left Arm Loveseat**  
 Overall: W65 D42 H35  
 Inside W56 D24 H21

**U8LL Corso Left Arm Loveseat**  
 Overall: W65 D38 H35  
 Inside: W56 D20 H21

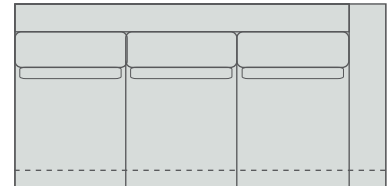


**U2SR Corso Right Arm Sofa**  
 W93 D42 H35  
 Inside W84 D24 H21

**U8SR Corso Right Arm Sofa**  
 Overall: W93 D38 H35 Inside: W84 D20 H21

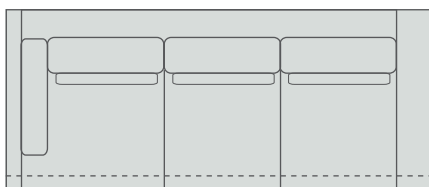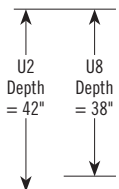


**U2DR Corso Right Arm Corner Sofa**  
 Overall: W107 D42 H35  
 Inside: W87 D24 H21

**U8DR Corso Right Arm Corner Sofa**  
 Overall: W107 D38 H35 Inside: W87 D20 H21

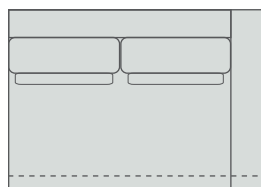

**U2LR Corso Right Arm Loveseat**  
 W65 D42 H35  
 Inside W56 D24 H21

**U8LR Corso Right Arm Loveseat**  
 Overall: W65 D38 H35  
 Inside: W56 D20 H21

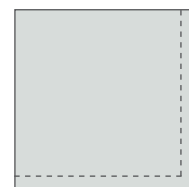



**U2O1 Corso Ottoman**  
 W42 D42 H16

**U8O1 Corso Ottoman**  
 Overall: W46 D42 H16  
 Inside: W28 D20




SHOWN:  
 U2SL-MBW Corso Left Arm Sofa  
 U201-SXW Corso Ottoman  
 U2SR-MBW Corso Right Arm Sofa  
 Arm height: 25 / Seat height: 16  
 Finish: Modern Elm

**Corso Sectional Elements**  
 1/4" = 1' Scale

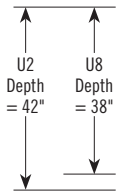


**U2A1 Corso Armless Chair**  
 Overall: W28 D42 H35 Inside: W28 D24 H21

**U8A1 Corso Armless Chair**  
 Overall: W28 D38 H35 Inside: W28 D20 H21

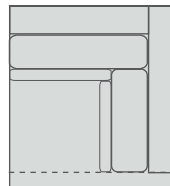



**U2E1 Corner**  
 Overall: W42 D42 H35  
 Inside W24 D24 H21

**U8E1 Corso Corner**  
 W42 D38 H35  
 Inside: W28 D20 H21

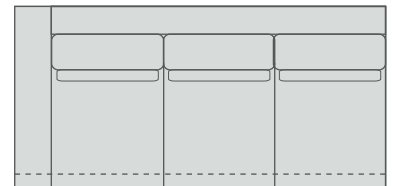


**U2SL Corso Left Arm Sofa**  
 Overall: W93 D42 H35  
 Inside W84 D24 H21

**U8SL Corso Left Arm Sofa**  
 Overall: W93 D38 H35  
 Inside: W84 D20 H21

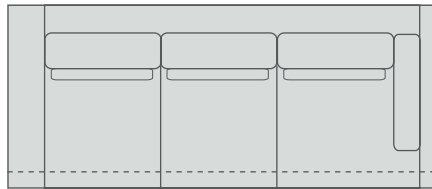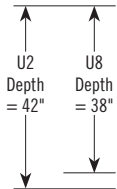


**U2DL Corso Left Arm Corner Sofa**  
 Overall: W107 D42 H35 Inside: W87 D24 H21

**U8DL Corso Left Arm Corner Sofa**  
 Overall: W107 D38 H35 Inside: W87 D20 H21

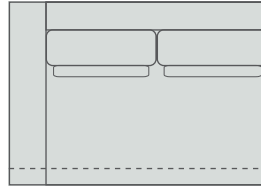



**U2LL Corso Left Arm Loveseat**  
 Overall: W65 D42 H35  
 Inside W56 D24 H21

**U8LL Corso Left Arm Loveseat**  
 Overall: W65 D38 H35  
 Inside: W56 D20 H21

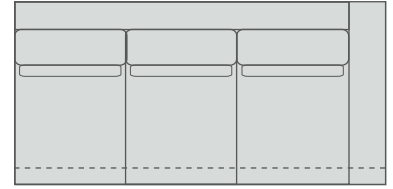


**U2SR Corso Right Arm Sofa**  
 Overall: W93 D42 H35  
 Inside W84 D24 H21

**U8SR Corso Right Arm Sofa**  
 Overall: W93 D38 H35  
 Inside: W84 D20 H21

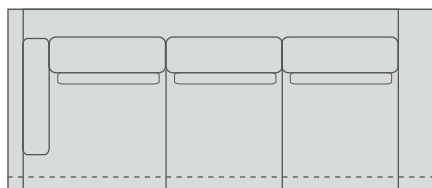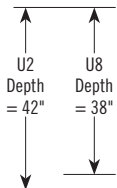


**U2DR Corso Right Arm Corner Sofa**  
 Overall: W107 D42 H35  
 Inside: W87 D24 H21

**U8DR Corso Right Arm Corner Sofa**  
 Overall: W107 D38 H35  
 Inside: W87 D20 H21

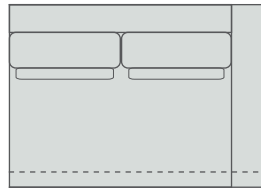

**U2LR Corso Right Arm Loveseat**  
 Overall: W65 D42 H35  
 Inside W56 D24 H21

**U8LR Corso Right Arm Loveseat**  
 Overall: W65 D38 H35  
 Inside: W56 D20 H21

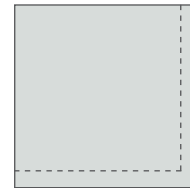


**U201 Corso Ottoman**  
 Overall: W42 D42 H16


**U801 Corso Ottoman**  
 Overall: W46 D42 H16



**SHOWN:**  
**U2BL-SBW Corso Left Bumper**  
**U2BR-SBW Corso Right Bumper**  
 Seat height: 16  
 Finish: Modern Elm

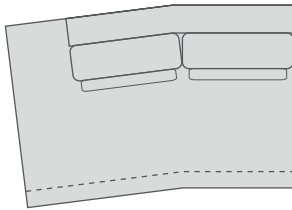

**U2BL-SBW Corso Left Bumper**  
 Overall: W72 D51 H35  
 Inside: W60 D24 H21

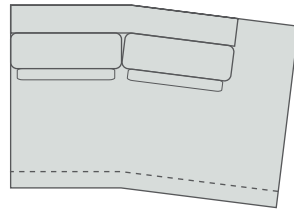

**U2BR-SBW Corso Right Bumper**  
 Overall: W72 D51 H34.5  
 Inside: W60 D24 H21

**U8BL Corso Left Bumper**  
 Overall: W72 D47 H35  
 Inside: W60 D20 H21

**U8BR Corso Right Bumper**  
 Overall: W72 D47 H35  
 Inside: W60 D20 H21



**U2CA Corso Armless Chaise**  
 Overall: W46 D72 H35 Inside: W46 D72 H21  
 Seat height: 16  
 One size only to accommodate either  
 U2 or U8 sectional  
 Finish: Modern Elm